


# PATRIOT®



**FLEXIBILITY**

**DESIGN**

**VALUE**

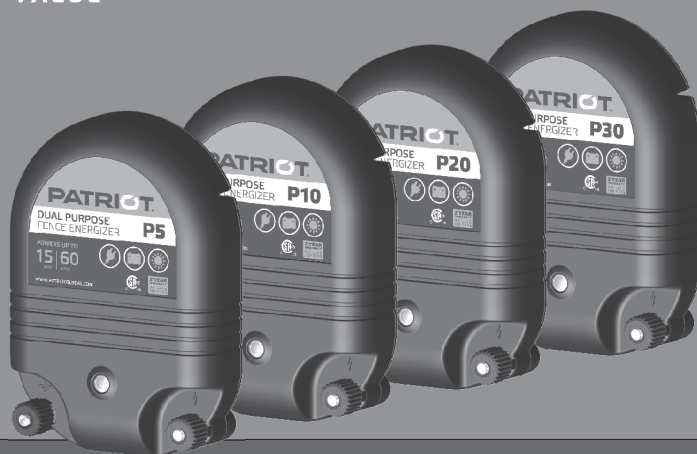

**P5**

**P10**

**P20**

**P30**

**USER MANUAL**

**WARNING: READ ALL INSTRUCTIONS  
ATTENTION! LIRE ATTENTIVEMENT TOUTES LES INSTRUCTIONS**

# Contents

<i>Your Patriot® energizer</i> .....	1
<i>Installation</i> .....	2
<i>Building an electric fence</i> .....	3
<i>Safe electric fence construction</i> .....	7
<i>Safety information</i> .....	8
<i>Definition of special terms</i> .....	8
<i>Requirements for electric animal fences</i> .....	9
<i>Frequently asked questions/ Troubleshooting</i> .....	11
<i>Servicing</i> .....	12
<i>Product specifications</i> .....	12
<i>24 month warranty from date of purchase</i> .....	13

© 2009-2013 Tru-Test Limited

All product names and brand names in this document are trademarks or registered trademarks of their respective holders.

No part of this publication may be photocopied, reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written permission of Tru-Test Limited. Product specifications may change without prior notice.

For more information about the Patriot range of quality products, see [www.patriotglobal.com](http://www.patriotglobal.com).

Tru-Test Inc 528 Grant Road Mineral Wells Texas 76067 USA	Tru-Test Ltd 25 Carbine Rd Mt Wellington Auckland 1060 New Zealand
---	--

Tru-Test Ltd thanks the International Electrotechnical Commission (IEC) for permission to reproduce Information from its International Publication 60335-2-76 ed.2.1 (2006). All such extracts are copyright of IEC, Geneva, Switzerland. All rights reserved. Further information on the IEC is available from [www.iec.ch](http://www.iec.ch). IEC has no responsibility for the placement and context in which the extracts and contents are reproduced by the author, nor is IEC in any way responsible for the other content or accuracy therein.

813243 Issue 2 06/2013

## *Models covered by this manual*

---

This manual covers various energizer models: P5, P10, P20, P30


# Your Patriot® energizer

Congratulations on your purchase of this quality Patriot energizer. Patriot energizers are manufactured in New Zealand by the world's leading electric fencing company, Tru-Test Ltd, and are the product of over 65 years of electric fencing experience. An extremely versatile energizer, the Patriot is ideally suited to control all types of livestock. The energizer is highly effective for controlling predators and can even be used for pet management. This “go-anywhere” energizer is also perfect for intensive strip grazing.

Using the power adapter supplied, the energizer can be connected to a 110 V electrical outlet. Alternatively, by using the battery lead supplied, it can also be powered by a 12 V battery. The energizer can even be plugged into your vehicle's cigarette lighter socket, for fencing horses when traveling or trail riding (separate lead required).

## Parts of the energizer

---

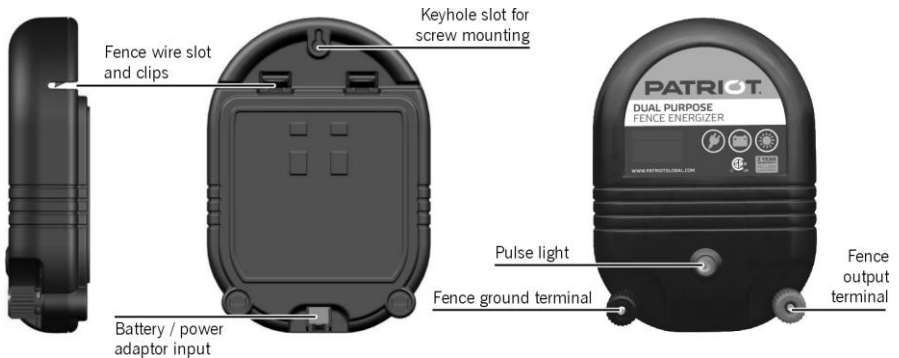

## Key to symbols on the energizer

---



Fence ground terminal. Connect the fence ground terminal to the ground system.



Fence output terminal. Connect the fence output terminal to the fence.



Risk of electric shock! This energizer is not repairable and should not be opened.



Read full instructions before use.



This symbol on the product or its packaging indicates that this product must not be disposed of with other waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city recycling office or the dealer from whom you purchased the product.



The energizer has a double-insulated construction. No serviceable parts.

### **WARNING!**

- To reduce the risk of electric shock, the energizer's power adapter may have a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.
- Switch the energizer off before installation or performing any work on the fence.
- Read all the safety considerations carefully. See *Safety Information* on page 7.
- Check your installation to ensure that it complies with all local safety regulations.
- Risk of electric shock! Do not connect simultaneously to a fence and to any other device such as a cattle trainer or a poultry trainer. Otherwise, lightning striking your fence will be conducted to all other devices.

### **ATTENTION!** *Risque de choc électrique*

Ne jamais connectez simultanément à une clôture et à un autre appareil de gestion de troupeau comme par exemple un nourrisseur automatique pour bovins ou poulets. Sinon, un coup de foudre qui frappe votre clôture sera transmis à tout autre appareil branché.

#### *Note:*

- This product has been designed for use with electric animal fences.
- Keep these instructions in a handy location.


## **Installation**

### *Warning!*

- Disconnect power before making changes to fence or ground wiring
- Mount out of reach of children.

- 1 Connect the Fence output terminal to the fence.
- 2 Connect the Fence ground terminal to a separate ground system that is at least 33' (10 m) away from other ground systems.


### 12 V battery

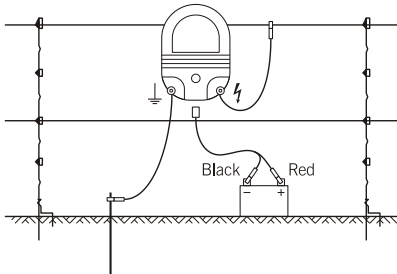

Only use the battery lead supplied with your energizer, or a genuine Patriot replacement.

*Note:* This energizer may be used as part of a solar installation by connecting it to a battery and solar panel(s). For information about solar installations, refer to the Patriot website [www.patriotglobal.com](http://www.patriotglobal.com).

### 110 V power adapter

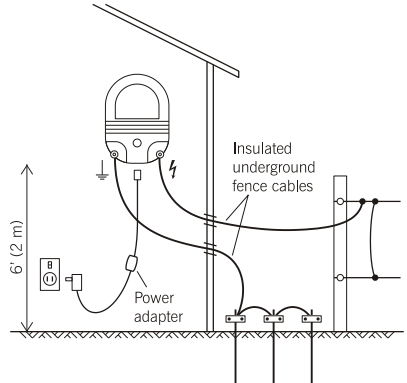

Only use the power adapter supplied with your energizer, or a genuine Patriot replacement.

See *Safety information* on page 8 for power adapter care instructions.


## Building an electric fence

For information about building an electric fence, refer to the Patriot website [www.patriotglobal.com](http://www.patriotglobal.com).


### Permanent fence construction

You need:


#### Insulators

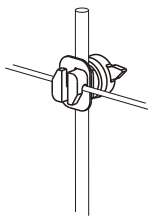


Steel rod post

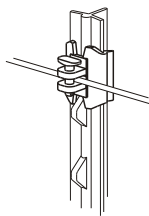

Steel T post

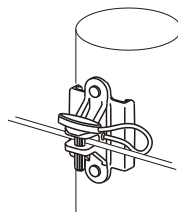


Steel T post / Wood post pinlock

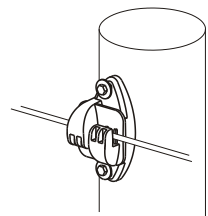


Wood post claw

## Typical fence construction

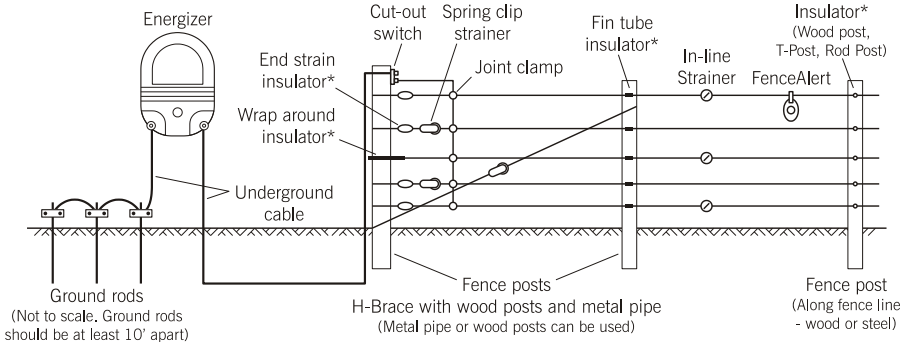


\* A single type of insulator can be used on the fence line or a mixture of each depending on individual needs and post type.

## Strainers

 

Tension to no more than 200 lb (90 kg)


## Recommended fence construction

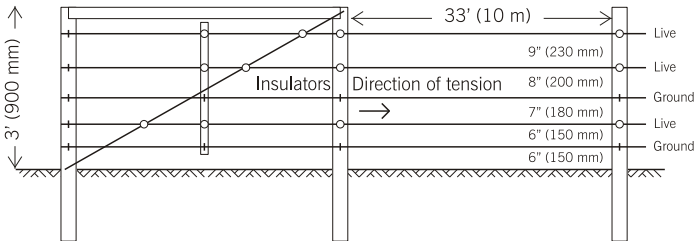

H-Brace – Very simple to erect and most suitable as a high tension strainer, excellent in areas where the soil gets very wet or where heavy frost occurs.

## Temporary fence construction

### Recommended wire spacing

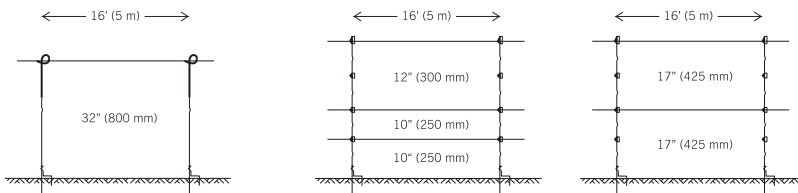


Dairy cattle

Sheep


Cattle

## Typical fence construction

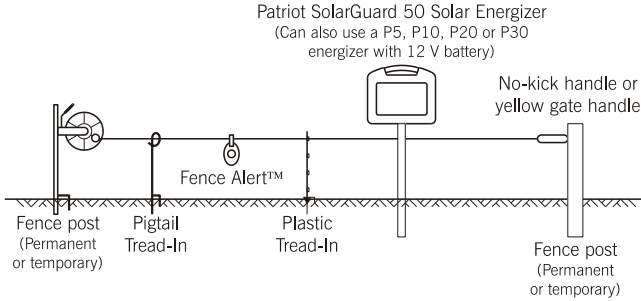

## Grounding a fence


### All live fence

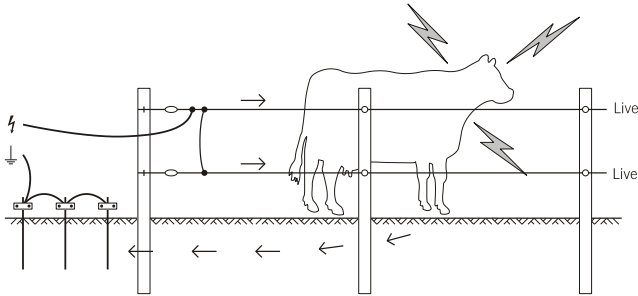

For most soil types.

The animal receives a shock when it completes a circuit between the fence and the ground system. The fence above has all live wires and requires conductive soils.

### Ground wire return fence

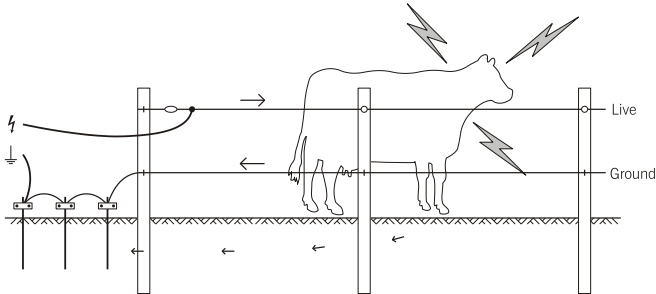

For dry, sandy or frozen ground conditions, where soil conductivity is low.

The animal receives a shock when it completes a circuit between a live wire and a ground wire. The fence above has both live wires and ground wires (not insulated to the post). The ground wire is connected back to the grounding system.

## ***Installing and testing a ground system***

Select a suitable site for the ground system. Sites need to be:

- At least 33' (10 m) from other ground systems (e.g. telephone, 110 V power or the ground system from another energizer).
- Away from stock or other traffic that could interfere with the installation.
- At a site that can be easily observed for maintenance.
- Ideally at a site that has damp soil (e.g. a shaded or swampy location). Note that the ground does not need to be directly adjacent to the energizer installation.

Drive ground rods into the soil. Use high-voltage, insulated cable and ground clamps to continuously connect the ground rods and the energizer's Fence ground terminal. Make sure the insulation is stripped back to ensure good contact between the wire and the ground rod. The table below specifies the minimum number of ground rods recommended for a grounding system:

<b><i>Energizer</i></b>	<b><i>Ground rods</i></b>
P5	1
P10	1
P20	2
P30	3


For an all live fence only, test the ground system using the following procedure:

- 1 Turn off the energizer.
- 2 At least 330' (100 m) away from the energizer, short-circuit the fence by laying several steel rods

or lengths of pipe against the fence. For best results, the fence voltage should be lowered to 2 kV or less. In dry or sandy conditions, it may be necessary to drive the rods up to 12" (300 mm) into the ground.

*Note:* It is not acceptable to short-circuit a ground wire return system to the ground wire of the fence.

- 3 Turn the energizer back on.
  - 4 Using a digital voltmeter, ensure that the fence voltage is below 2 kV.
  - 5 Check your ground system. Insert the voltmeter's ground probe into the ground at the full extent of the lead, and hold the other terminal against the last ground rod. The tester should not read more than 0.3 kV. Anything higher than this indicates that better grounding is required. Either add more ground rods or find a better ground area to drive in the ground rods.
- Note:* When grounding energizers located in dairies, ground at least 65' (20 m) away from the dairy using double-insulated wire to avoid touching the dairy building or equipment.

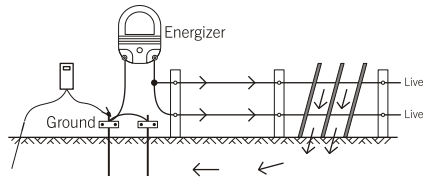



## Safe electric fence construction

**WARNING!** Read before use.

An electric fence can be hazardous when there is a risk of entrapment or entanglement, or other hazards exist. Serious injury or death may result. Take all steps to avoid the risk of entrapment or entanglement. This safety information should be read in conjunction with *Requirements for electric animal fences* on page 9.

### Hazards

---

- ☒ **Do not** climb through or under an electric fence. If it is necessary to cross an electric fence use a gate or specially designed crossing point.
- ☒ **Do not** allow young or infirm persons to use this energizer without supervision. Do not allow young children to play with this energizer or near an electric fence or electrified wires.
- ☒ **Do not** electrify barbed wire.
- ☒ **Do not** support off-set electrified wires less than 6" (150 mm) from the vertical plane of a barbed wire fence.
- ☒ **Do not** electrify any fence construction which could lead to entanglement of persons or animals. We recommend for instance, that no more than one electrified off-set wire be supported on either side of a barbed wire or mesh fence.
- ☒ **Do not** supply an electric fence from two energizers.
- ☒ **Do not** allow electrified wires from two energizers on the same or adjacent properties to be less than 8'2" (2.5 m) apart.
- ☒ **Do not** place energizer ground electrodes within 33' (10 m) of any part of a power supply ground system or telecommunications ground system.
- ☒ **Do not** run electric fence wires above or close to overhead power or communication lines.

### Duty to the public

---

Fasten warning signs to electric fence posts or wires at frequent intervals along any public roads or pathways. Incorporate a non-electrified gate or stile where an electric animal fence crosses a public pathway and fasten warning signs to fence posts or wires adjacent to the crossing.

For more information, contact Patriot or your local Patriot dealer. Refer to [www.patriotglobal.com](http://www.patriotglobal.com) for contact details.


# Safety information

## Power adapter - Important safety instructions

---

When using electrical products, basic precautions should always be practiced including the following:

- 1 **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- 2 Read and follow all instructions provided with the energizer and power adapter.
- 3 Do not use an extension cord with the power adapter.
- 4 Refer to the National Electrical Code ANSI/NFPA 70 for information about the installation of wiring and clearances from power and lighting conductors.
- 5 Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- 6 Do not install or use within 10 feet (3 m) of a pool.
- 7 Do not use in a bathroom.
- 8 **WARNING:** Risk of electric shock. When used outdoors or in a wet location, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power adapter connected to the receptacle. If a correct GFCI protected receptacle is not currently installed, contact a qualified electrician for proper installation. Ensure that nothing interferes with completely closing the receptacle cover.

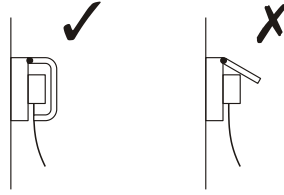

- 9 **WARNING:** Risk of fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.

## Definition of special terms

*Electric fence energizer/Energizer* – An appliance that is intended to periodically deliver voltage impulses to a fence connected to it.

*Fence* – A barrier for animals or for the purpose of security, comprising one or more conductors such as metal wires, rods or rails.

*Electric fence* – A barrier that includes one or more electric conductors, insulated from ground, to which electric pulses are applied by an energizer.

*Ground electrode* – Metal structure that is driven into the ground near an energizer and connected electrically to the Fence ground terminal of the energizer, and that is independent of other grounding arrangements.

*Connecting lead* – An electric conductor, used to connect the energizer to the electric fence or the ground electrode.

## *Requirements for electric animal fences*

Electric animal fences and their ancillary equipment shall be installed, operated and maintained in a manner that minimizes danger to persons, animals or their surroundings.

*Warning!* Avoid contacting electric fence wires especially with the head, neck or torso. Do not climb over, through or under a multi-wire electric fence. Use a gate or a specially designed crossing point.

This energizer is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the energizer by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the energizer.

Electric animal fence constructions that are likely to lead to the entanglement of animals or persons shall be avoided.

An electric animal fence shall not be supplied from two separate energizers or from independent fence circuits of the same energizer.

For any two separate electric animal fences, each supplied from a separate energizer independently timed, the distance between the wires of the two electric animal fences shall be at least 8'2" (2.5 m). If this gap is to be closed, this shall be effected by means of electrically non-conductive material or an isolated metal barrier.

Barbed wire or razor wire shall not be electrified by an energizer.

A non-electrified fence incorporating barbed wire or razor wire may be used to support one or more off-set electrified wires of an electric animal fence. The supporting devices for the electrified wires shall be constructed so as to ensure that these wires are positioned at a minimum distance of 6" (150 mm) from the vertical plane of the non-electrified wires. The barbed wire and razor wire shall be grounded at regular intervals. Go to [www.patriotglobal.com](http://www.patriotglobal.com) for information regarding grounding.

A distance of at least 33' (10 m) shall be maintained between the energizer ground electrode and any other grounding system connected parts such as the power supply system protective ground or the telecommunication system ground.

Connecting leads that are run inside buildings shall be effectively insulated from the grounded structural parts of the building. This may be achieved by using insulated high voltage cable.

Connecting leads that are run underground shall be run in conduit of insulating material or else insulated high voltage cable shall be used. Care must be taken to avoid damage to the connecting leads due to the effects of animal hooves or vehicle wheels sinking into the ground.

Connecting leads shall not be installed in the same conduit as mains supply wiring, communication cables or data cables.

Connecting leads and electric animal fence wires shall not cross above overhead power or communication lines.

Crossings with overhead power lines shall be avoided wherever possible. If such a crossing cannot be avoided it shall be made underneath the power line and as nearly as possible at right angles to it.

If connecting leads and electric animal fence wires are installed near an overhead power line, the clearances shall not be less than those shown in the table below.

Minimum clearances from power lines for electric animal fences:

<i>Power line voltage</i>	<i>Distance</i>
≤1000 V	10' (3 m)
>1000 to ≤33,000 V	13' (4 m)
>33,000 V	14' (8 m)

If connecting leads and electric animal fence wires are installed near an overhead power line, their height above the ground shall not exceed 10' (3 m). This height applies to either side of the orthogonal projection of the outermost conductors of the power line on the ground surface, for a distance of:

- 6'6" (2 m) for power lines operating at a nominal voltage not exceeding 1000 V.
- 50' (15 m) for power lines operating at a nominal voltage exceeding 1000 V.

Electric animal fences intended for deterring birds, household pet containment or training animals such as cows need only be supplied from low output energizers to obtain satisfactory and safe performance.

 
In electric animal fences intended for deterring birds from roosting on buildings, no electric fence wire shall be connected to the energizer ground electrode.

A warning sign shall be fitted to every point where persons may gain ready access to the conductors.

Where an electric animal fence crosses a public pathway, a non-electrified gate shall be incorporated in the electric animal fence at that point or a crossing by means of stiles shall be provided. At any such crossing, the adjacent electrified wires shall carry warning signs.

Any part of an electric animal fence that is installed along a public road or pathway shall be identified at frequent intervals by warning signs securely fastened to the fence posts or firmly clamped to the fence wires.

- The size of the warning sign shall be at least 4x8" (100x200 mm).
- The background color of both sides of the warning sign shall be yellow. The inscription on the sign shall be black and shall be either:



or the substance of "CAUTION: Electric Fence".

- The inscription shall be indelible, inscribed on both sides of the warning sign and have a height of at least 1" (25 mm).

Ensure that all mains-operated, ancillary equipment connected to the electric animal fence circuit provides a degree of isolation between the fence circuit and the supply mains equivalent to that provided by the energizer.

Protection from the weather shall be provided for the ancillary equipment unless this equipment is certified by the manufacturer as being suitable for use outdoors, and is of a type with a minimum degree of protection IPX4.

# *Frequently asked questions/ Troubleshooting*

## *How do I increase fence voltage?*

Sometimes recent extensions to your fence, a poor fence layout, or soil conditions may be causing inadequate voltage.

To check the energizer, disconnect it from the fence and the ground system. Measure the voltage across the energizer terminals with a digital voltmeter. If the voltage is less than 6 kV your energizer may be faulty. Go to [www.patriotglobal.com](http://www.patriotglobal.com) for more details.

## *How do I locate faults?*

The most common cause of low voltage is faults on the fence line. Faults can be arcing faults that often make a clicking sound that can be heard when walking along a fence line. These are most often caused by faulty insulators or poor connections (loose clamps, tied wires or faulty cutout switches) and are normally fixed by replacing the faulty insulator or repairing the faulty connections. Note: Always use specially made joining clamps or crimps to secure wire to wire connections on the fence line.

Another fault type is a short circuit fault. This fault occurs when a live fence wire becomes connected in some way to the ground. A short circuit fault wastes the power of the energizer by drawing energy away from where it is needed, the fence line. A common cause of short circuit faults is vegetation touching the live wires. Regular clearing of vegetation from the

fence line will enhance your energizer's performance. The best method to locate a short circuit fault is to use a special fault finder. These products save considerable time by directing you straight to the fault. Go to [www.patriotglobal.com](http://www.patriotglobal.com) for more details.

Another tool used to locate faults is a digital voltmeter. When using a digital voltmeter, simply isolate sections of your fence by opening cut-out switches or otherwise disconnecting sections of the fence from the main lead out wire/s. Measure the voltage and determine whether the voltage has improved. If after disconnecting a section of the fence you record a significant improvement in fence voltage, it is likely that the fault is located in the section of fence that you have just isolated. Often a visual inspection of the faulty section will reveal the problem.

By carrying your voltmeter or fault finder when you move around the farm you can regularly test your fence system and fix faults before they lead to or result in a larger problem.

## *There are no lights flashing on the energizer*

Check the power supply. If the energizer is connected to the 110 V power adapter, ensure that the power is switched on. Disconnect the power then reconnect the power 30 seconds later.

If the energizer is connected to a 12 V battery, ensure that the positive (red) clip is connected to the positive terminal on the battery and the negative (black) clip is connected to the negative terminal on the battery.

If the energizer's pulse light still does not flash, disconnect the battery then reconnect the battery 30 seconds later. Also, check the battery voltage.

If the energizer still does not operate, refer to your warranty conditions.

## Servicing

This product cannot be serviced. Please refer to your warranty conditions.

### Service of double insulated appliances

In a double insulated energizer, two systems of insulation are provided instead of grounding. Patriot P5, P10, P20 and P30 energizers contain no serviceable parts.

## Product specifications

	<i>P5</i>	<i>P10</i>	<i>P20</i>	<i>P30</i>
	15 miles/ 60 acres	30 miles/ 100 acres	50 miles/ 165 acres	65 miles/ 200 acres
Power supply	12 V battery or 100-120 V power adapter supplied			
Current consumption using a 12 V, lead-acid battery	45 mA	90 mA	170 mA	300 mA
Output voltage	8.0 kV max, 4.5 kV at 500 Ω	9.7 kV max, 5.4 kV at 500 Ω	10.5 kV max, 6.0 kV at 500 Ω	11.0 kV max, 6.4 kV at 500 Ω
Output energy	up to 0.5 J	up to 1 J	up to 2 J	up to 3 J
Stored energy	up to 0.7 J	up to 1.3 J	up to 2.7 J	up to 4.6 J

Table represents typical values. Actual range depends on many factors including fence and farm conditions.

# 24 month warranty

*from date of purchase*

This warranty does not cover defects caused by:

- Incorrect input voltage or polarity
- Damage to external wiring
- Physical mishandling
- Water immersion
- Vermin or insect damage
- Battery leakage or chemicals

Tru-Test and its agents accept no responsibility for any accident caused subsequent to any tampering with or modification or misuse of this product, including repairs or alterations made by anyone other than Tru-Test or its agents.

No conditions, warranties or guarantees, statutory or otherwise, whether oral or in writing (other than this service warranty), shall attach to this product and its sale and purchase, other than that it will be delivered in good working condition.

The details below must be properly completed by the dealer at the time of purchase.

This product is warranted against faulty material and workmanship for a period of 24 calendar months FROM DATE OF PURCHASE.

If any warranted defect occurs during the warranty period, return the product with proof of purchase to your local Patriot dealer, distributor, or directly to the manufacturer. Protect your investment by completing this warranty card today and mailing it to:

**Tru-Test Inc. 528 Grant Road,  
Mineral Wells, TX 76067**

Model:	Serial number:
Name of owner:	
Address:	
Date of purchase:	
Dealer contact details: (must be completed by dealer)	



**This product is warranted against lightning strike**

**PATRIOT**

*SAVE THESE INSTRUCTIONS*

*[www.patriotglobal.com](http://www.patriotglobal.com)*